PINTAIL™ ANCHOR HANGING AND BRACING SOLUTIONS for 2.0DS-30 FL / 2.0DF-30 FL COMPOSITE DECK-SLAB

Hang and Brace Loads from 2.0DS-30 FL / 2.0DF-30 FL **Composite Deck-Slabs**

PINTAIL[™] AN

LOAD IN ANY

Part Number 20PT3 20PT4

IAMPO

1/2"-13

NCHOR) UES ER										
DIRECTI	ION				f _c = 300)0 psi (n	nin.) & 1	10 lb/ft	3 (min.)	IAPMO ES®
Threaded Rod Size	Allo	Ω (lbs)	Design Strength, øP _n (lbs)							
			Spacing (in.)							
(in.)	2 3/8	4	6	8	≥ 9 3/8 *	2 3/8	4	6	8	≥ 9 3/8 *
3/8"-16	345	365	390	415	432	569	603	644	685	712

432

569

603

644

685

712

*Minimum spacing for full strength. The minimum spacing applies to Pintail Anchors in the same or adjacent flute.

415

390

f_ = 3000 psi MAXIMUM SPRINKLER PIPE DIAMETER


345


365

Part Number	Threaded Rod Size (in.)	Hanging NPS Diameter (in.)	Bracing NPS Diameter (in.)		
20PT3	3/8"-16	4	by analysia		
20PT4	1/2"-13	4	by analysis		

Notes:


- 1. Tabulated values show maximum load in any direction. Design for specific shear, tension, or shear/tension combinations, loads at specific angle, or for alternate concrete strength up to $f'_{a} = 4,000$ psi is permissible. See IAPMO Report ER-0423 and online design tool.
- 2. The strength of the Dovetail FL composite steel deck-slab, PinTail anchor, threaded rod or bolt, and other connecting hardware shall be equal or greater than the governing load combination as stipulated in the IBC or ASCE/SEI 7 including the fire sprinkler system loading.
- 3. The effect of connection spacing interaction, between the PinTail anchors and any other connections to the composite steel-deck slab shall be considered.
- 4. Maximum fire sprinkler pipe size in accordance with NFPA 13 assuming minimum connector spacing and no applied shear load.
- 5. PinTail anchors shall be installed and inspected in accordance with manufacturer's instructions.

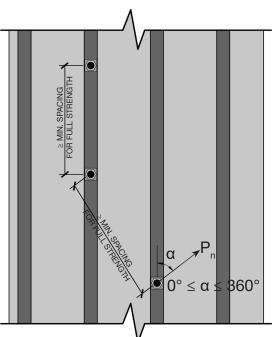

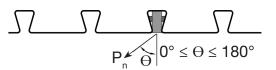



PINTAIL™ ANCHOR HANGING AND BRACING SOLUTIONS INSTALLATION INSTRUCTIONS

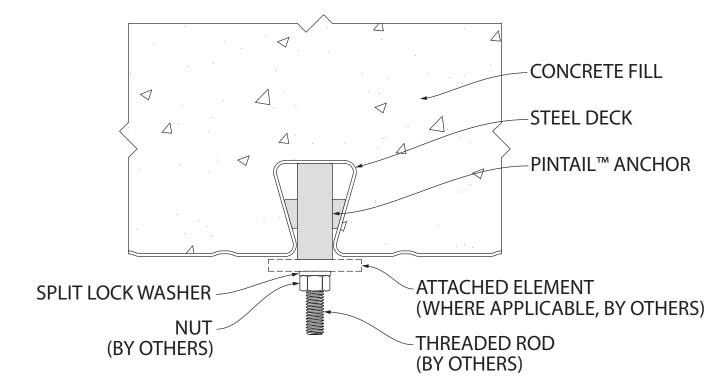

INSTALLATION:

- 1. Ensure deck rib is free of foreign material.
- 2. Insert threaded rod into PinTail[™] anchor and thread into wedgenut.
- 3. Insert PinTail[™] anchor into steel deck.
- 4. Push in threaded rod and rotate wedgenut 90 degrees.
- 5. Release threaded rod to seat the wedgenut against the webs of steel deck.
- 6. Attach element (where applicable) followed by split lock washer and nut.
- 7. Tighten nut until split lock washer is fully compressed.





PINTAIL™ ANCHOR HANGING AND BRACING SOLUTIONS for 3.5DS-24 FL / 3.5DF-24 FL COMPOSITE DECK-SLAB

Hang and Brace Loads from 3.5DS-24 FL / 3.5DF-24 FL Composite Deck-Slabs

PINTAIL™ ANCHOR

• IAMPO UES ER-0423



LOAD IN ANY DIRECTION

f_a = 3000 psi (min.) & 110 lb/ft³ (min.)

	Threaded Rod Size	Allowable Strength, P_n/Ω (lbs) Spacing (in.)				Design Strength, øP _n (lbs) Spacing (in.)			
Part Number	(in.)	4 3/16	12	24	≥ 34 3/8 *	4 3/16	12	24	≥ 34 3/8 *
35PT3	3/8"-16	479	560	683	790	791	924	1127	1303
35PT4	1/2"-13	479	560	683	790	791	924	1127	1303
35PT5	5/8"-11	479	560	683	790	791	924	1127	1303


*Minimum spacing for full strength. The minimum spacing applies to Pintail Anchors in the same or adjacent flute.

MAXIMUM SPRINKLER PIPE DIAMETER f_c = 3000 psi

Part Number	Threaded Rod Size (in.)	Hanging NPS Diameter (in.)	Bracing NPS Diameter (in.)
35PT3	3/8"-16	4	
35PT4	1/2"-13	8	by analysis
35PT5	5/8"-11	8	

Notes:


- 1. Tabulated values show maximum load in any direction. Design for specific shear, tension, or shear/tension combinations, loads at specific angle, or for alternate concrete strength up to $f'_c = 4,000$ psi is permissible. See IAPMO Report ER-0423 and online design tool.
- 2. The strength of the Dovetail FL composite steel deck-slab, PinTail anchor, threaded rod, or bolt and other connecting hardware shall be equal or greater than the governing load combination as stipulated in the IBC or ASCE/SEI 7 including the fire sprinkler system loading.
- 3. The effect of connection spacing interaction, between the PinTail anchors and any other connections to the composite steel-deck slab shall be considered.
- 4. Maximum fire sprinkler pipe size in accordance with NFPA 13 assuming minimum connector spacing and no applied shear load.
- 5. PinTail anchors shall be installed and inspected in accordance with manufacturer's instructions.

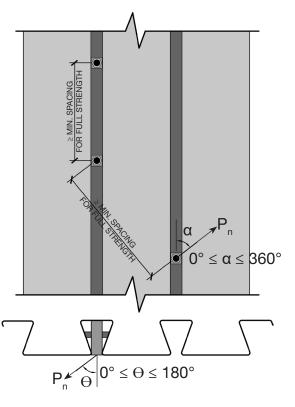





PINTAIL™ ANCHOR HANGING AND BRACING SOLUTIONS INSTALLATION INSTRUCTIONS

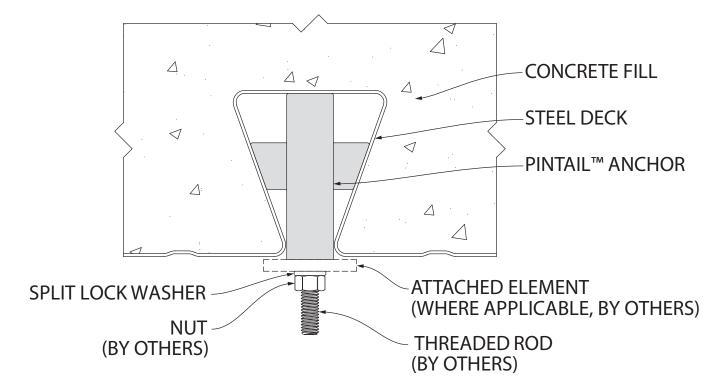

INSTALLATION:

- 1. Ensure deck rib is free of foreign material.
- 2. Insert threaded rod into PinTail[™] anchor and thread into wedgenut.
- 3. Insert PinTail[™] anchor into steel deck.
- 4. Push in threaded rod and rotate wedgenut 90 degrees.
- 5. Release threaded rod to seat the wedgenut against the webs of steel deck.
- 6. Attach element (where applicable) followed by split lock washer and nut.
- 7. Tighten nut until split lock washer is fully compressed.



